


WALL-MOUNTING ADAPTER KIT INSTRUCTIONS

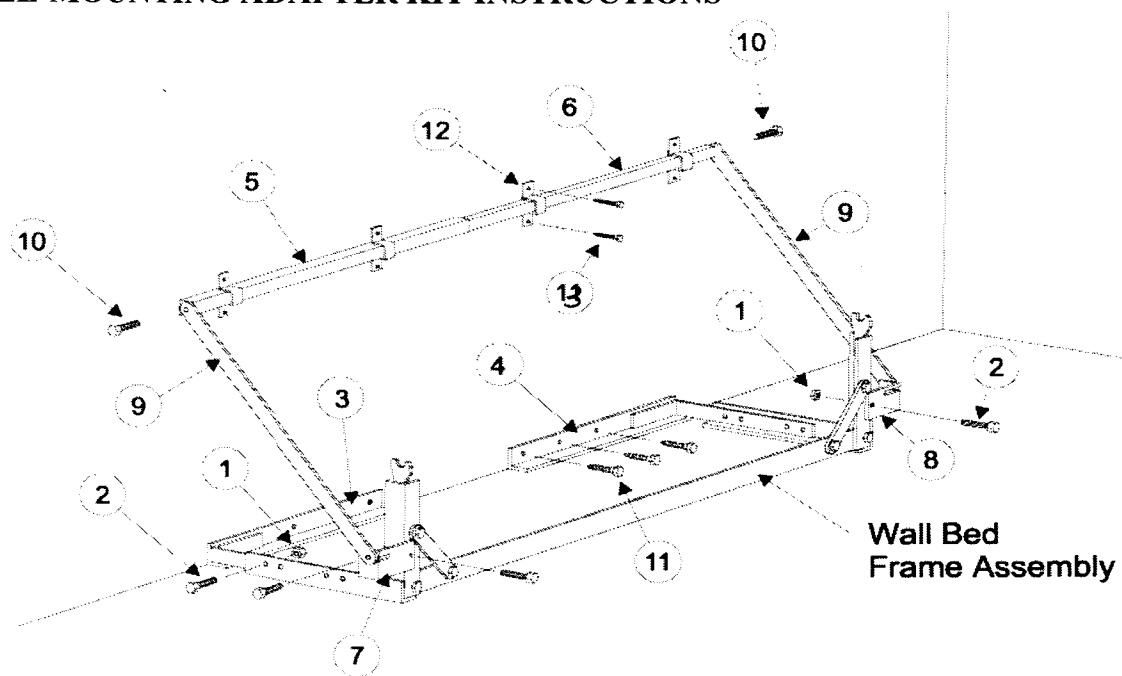

ITEM	HARDWARE	QTY.	ASSEMBLY
1	¼-20 Hex Nut	8	<p>1. Place wall bed floor frame assembly on floor in permanent position. The Floor Saver Assembly will eliminate the need to drill anchors into the floor.</p> <p>2. Place the left baseboard bracket (3) against the wall as shown. Connect it to the left side of the bed floor frame with ¼-20 bolts (2) and nuts (1). Holes are provided for 15" or 20" deep cabinets.</p> <p>3. Place right baseboard bracket (4) against wall as shown. Connect bolts as on left Bracket.</p> <p>4. Drill pilot holes through back of baseboard brackets into 2 x 4 wall framing.</p> <p>5. Install lag bolts (11) through brackets.</p> <p>6. Locate and install left angle brace (7) to frame upright angle with ¼-20 bolts (2) and nuts (1).</p> <p>7. Attach flat bar (9) to left angle brace as shown with ¼-20 bolt and nut. Attach flat bar (9) to right angle brace. Both bars should be leaning against the wall.</p> <p>8. Install the slide tube (6) inside the outer tube (5). The slide action provides adjustment for twin, double and queen frames.</p> <p>9. Place tube assembly against wall in between the flat bars and install 9/16-20 bolts (10).</p>
2	¼-20 Hex Cap Screw	8	
3	Baseboard Bracket – left	1	
4	Baseboard Bracket – Right	1	
5	Outer Tube	1	
6	Slide Tube	1	
7	Angle Bracket - Left	1	
8	Angle Bracket – Right	1	
9	Flat Bar	2	
10	9/16-20 UNF Bolt	2	
11	Lag Bolt	6	<p>10. Secure the tubes to wall with 'U' brackets (12) drilling pilot holes into 2 x 4 wall studs and using 1 ½ pan head screw (13).</p>
12	'U' Bracket	4	
13	#6 1 ½ Pan Head Screw	8	